


Installation Instructions



1. Assemble fixing brackets to base of sambas using M8x25mm security screws and lock washers. (1.1) (See Assembly Guide)

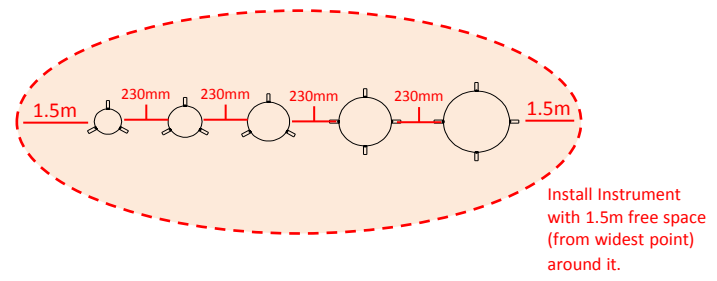


Ground Fixed
Rainbow Sambas
Page 1 of 4




2. Arrange Sambas with minimum spacing between each drum at 230mm and mark holes for excavation. Each hole should be 80-100mm larger than the drum itself.

Sambas will arrive on site in pre set heights. In ground fixing depth 300mm for all 5 sambas.

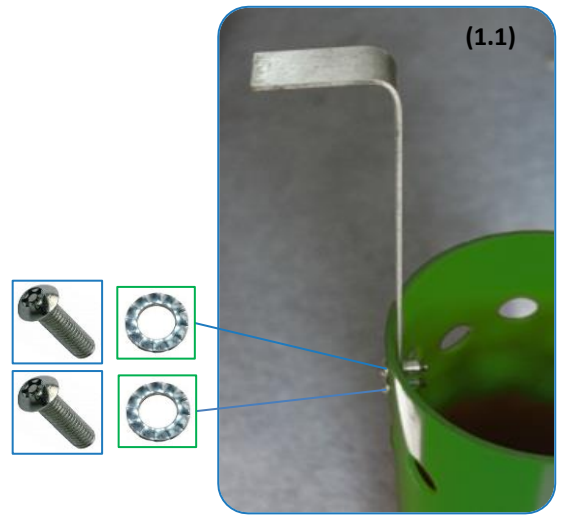

3. Excavate marked holes to 300mm depth making sure the holes have a level base allow the sambas to sit vertical.

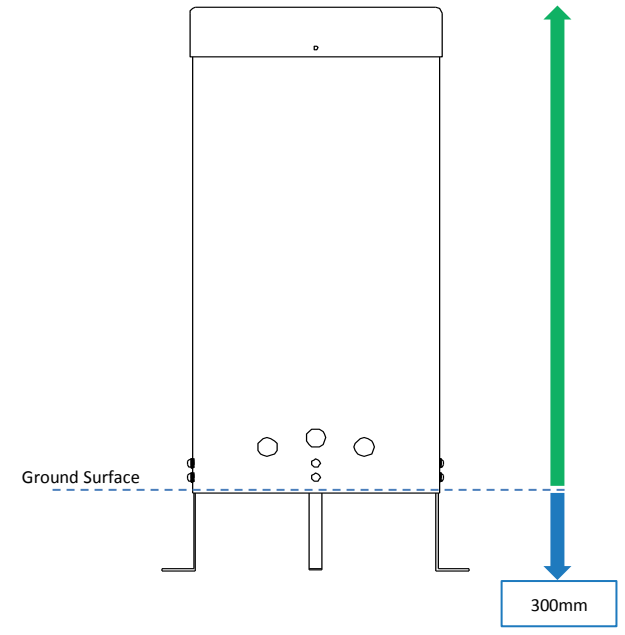

4. Once happy with location of the sambas, fill holes using rapid hardening concrete. Be sure to compact concrete around metal brackets and leave to dry according to manufactures guidelines.

Instrument Components:
Rainbow Sambas are pre-assembled

Metric Conversion:
80mm/ 3"
100mm/ 4"
230mm/ 9"
300mm/ 12"
400mm/ 16"
450mm/ 18"
1.5m/ 59"

Weight of heaviest part 14.6kg (XL Samba)



Spares available form percussionplay.com or from your local distributor

44 Kg


Assembly Guide PPRASA

Tools:






x1
TX 40 Driver Bit

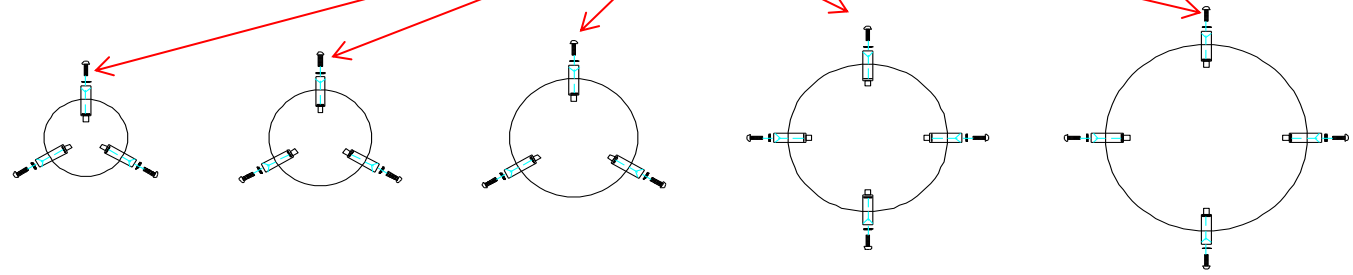
Thread Lock Solution
Required (Not Supplied)



PPRASA PLAN

COMPONENTS LIST:

-  M8x25 Pin torx X34
-  M8 Lock washer X34
-  Ground Fix L Bracket X17

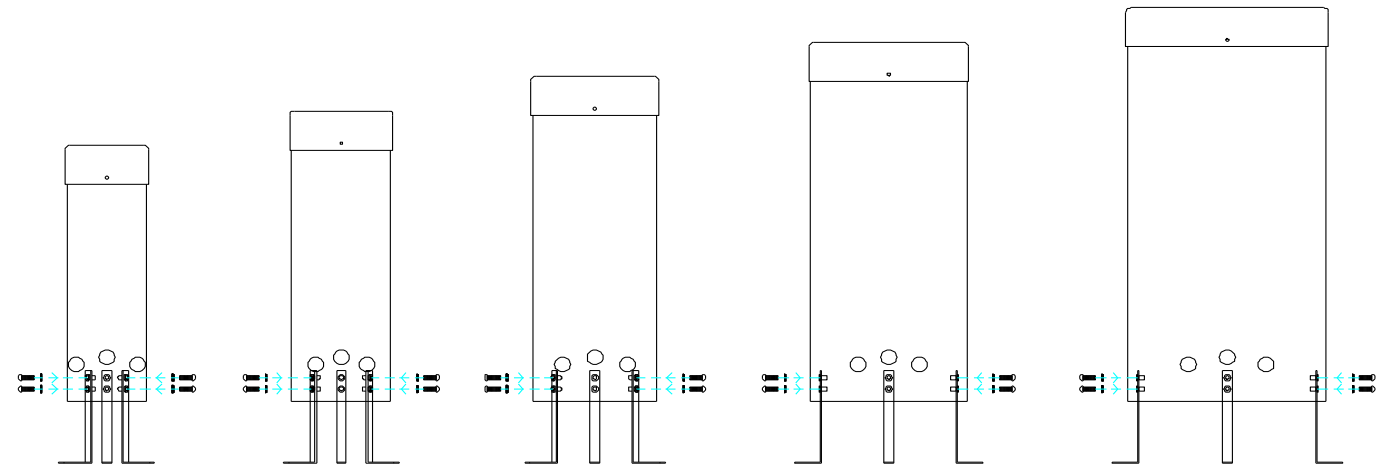

PPRASA FRONT

Ground Fixed
Rainbow Sambas
Page 2 of 4



Instrument
Components:

Rainbow
Sambas
are pre-
assembled

Thread Lock Solution
Required (Not Supplied)




Played with hands

Ground Fix
Components:



x34
M8x25 Security Screw



x34
M8 Lock Washer




x17
L Brackets

Spares available from
percussionplay.com or from your
local distributor

44 Kg


Ground Fix Installation

Tools:



x1
TX 40 Driver Bit


Ground Fixed Rainbow Sambas Page 3 of 4

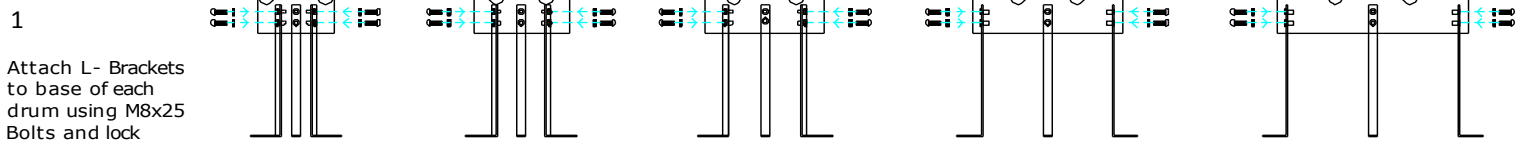

Attach L- Brackets to base of each drum using M8x25 Bolts and lock washers provided.

Components:

-  x17
M8x25mm Pin Torx
-  x34
M8 Lock Washer
-  x17
L Brackets

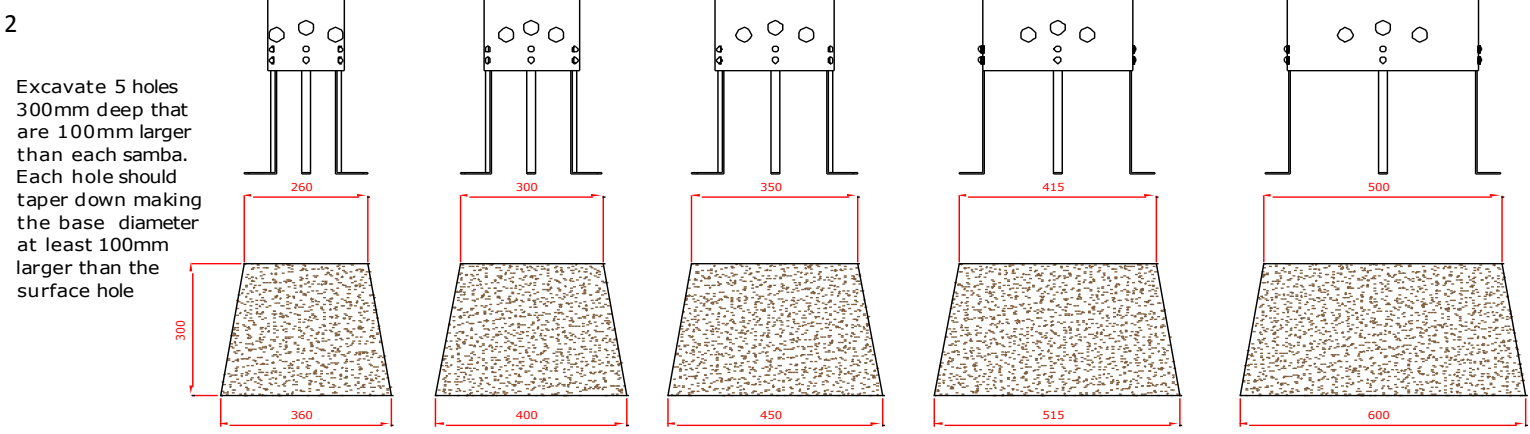

Excavate 5 holes 300mm deep that are 100mm larger than each samba. Each hole should taper down making the base diameter at least 100mm larger than the surface hole

Ground Fix Installation

Ground Fixed Rainbow Samba

Page 4 of 4




Components:

-  x17
M8x25mm Pin Torx
-  x34
M8 Lock Washer
-  x17
L Brackets

Metric Conversion:
 65mm/ 3"
 250mm/ 8"
 300mm/ 12"
 350mm/ 14"
 415mm/ 16"
 450mm/ 18"
 500mm/ 20"
 515mm/ 20"
 600mm/ 24"



3
Compact each hole with a maximum of 65mm of aggregate and lower each samba into its hole

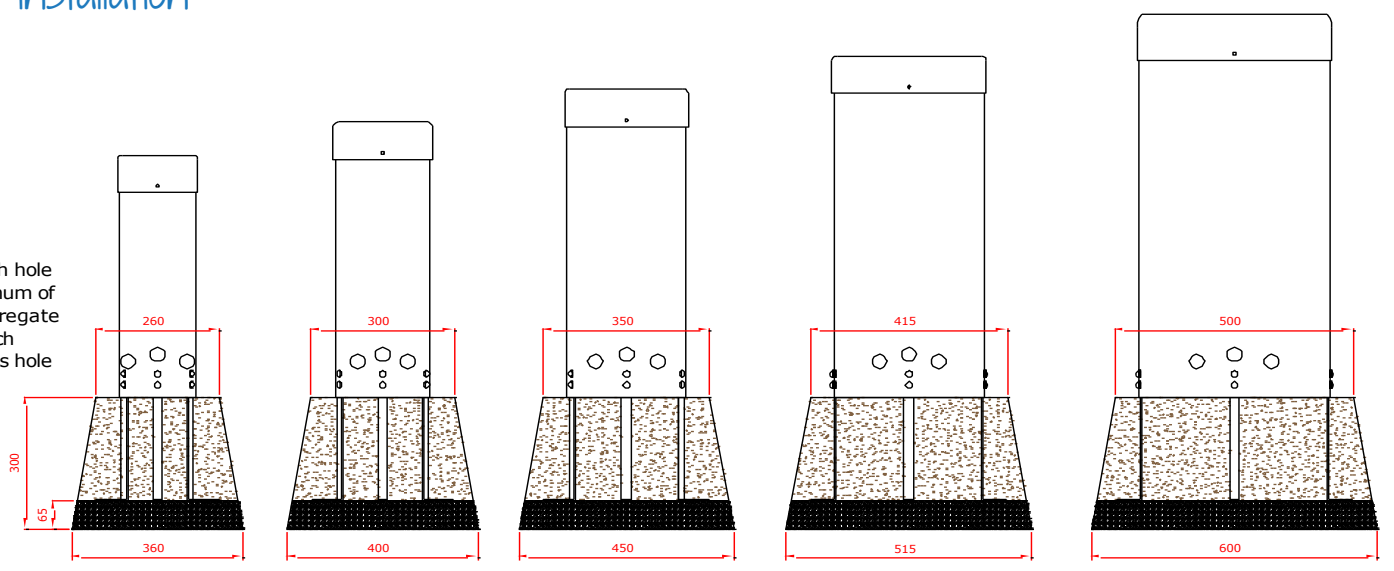

Foundations should not present a hazard. These foundations are recommended as a guide, for more information on foundation details for various surface see Part 7 of BS EN 1176.

4
Fill each hole with fast drying concrete to manufacturers specifications.

