

# Installation Instructions






1. Attach the steel leg to each of the congas with the M10x30 security screws, square washers and HDPE mounts. **(1.1)** (See Assembly Guide)

2. Attach Ground Fixings to legs **(1.2)** (See Ground Fix Post Installation Sheet)


3. Excavate **1** hole for the Steel leg **250mm diameter by 400mm deep**, in desired location upon decision from customer.

4. Locate (lower) legs into hole making sure they are vertical and level prior to concreting in place.

5. Once happy with location of the Instrument, **fill** hole using rapid hardening **concrete**. Be sure to compact concrete around legs and leave to dry according to manufactures guidelines.

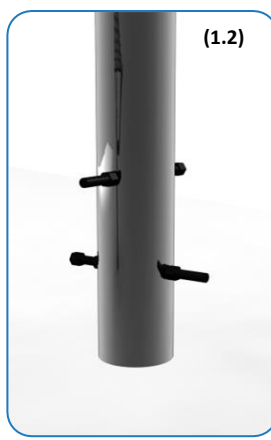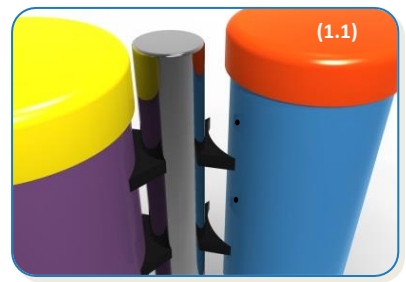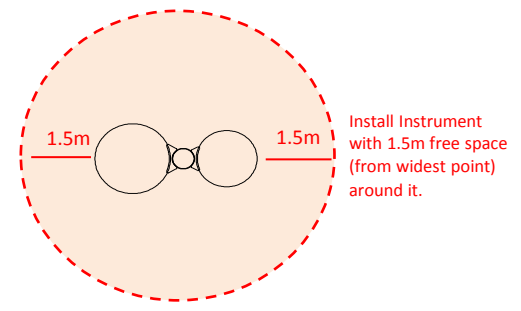

Weight of heaviest part **3.8kg** (Large drum Small Congas)  
Weight of heaviest part **4.5kg** (Large drum Medium Congas)  
Weight of heaviest part **5.2kg** (Large drum Large Congas)

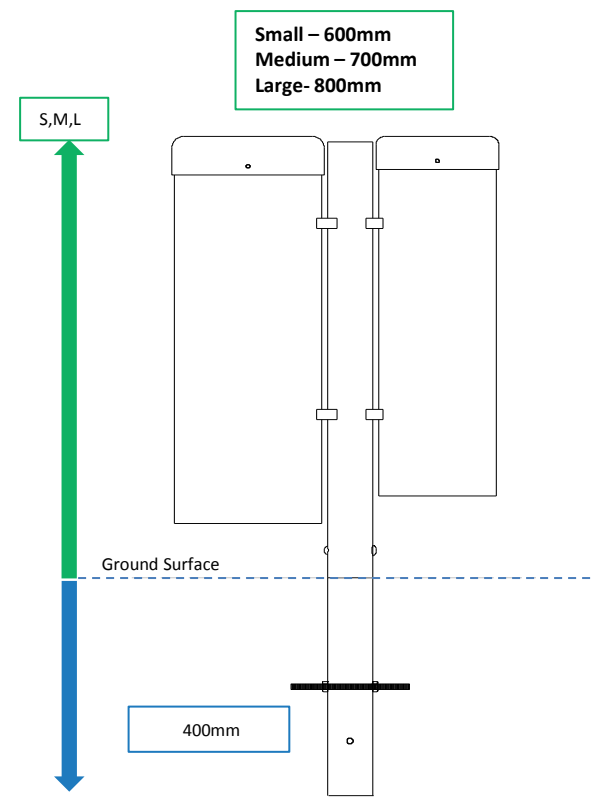





## Ground Fixed

Congas  
Page 1 of 3





### Instrument Components:

-  x4  
M10x50 Security Screw
-  x4  
M10x50x3 Square washer
-  x2  
200 Mount
-  x2  
250 Mount

Metric Conversion:  
250mm/ 10"  
400mm/ 16"  
600mm/ 24"  
700mm/ 28"  
800mm/ 31"  
1.5m/ 59"



### Ground Fix Components:

-  x2  
M10x200 Bolt
-  x4  
M10 Nut


Spares available form  
[percussionplay.com](http://percussionplay.com) or from your  
local distributor

14.8 Kg  
15 Kg  
20 Kg

# Assembly Guide PPCONG


**Tools:**

 x1  
TX 45 Driver Bit

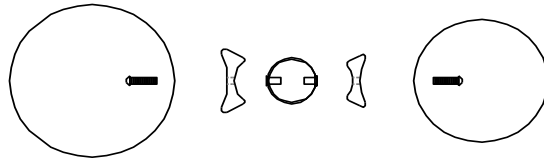


PPCONG PLAN

Thread Lock Solution  
Required (Not Supplied)

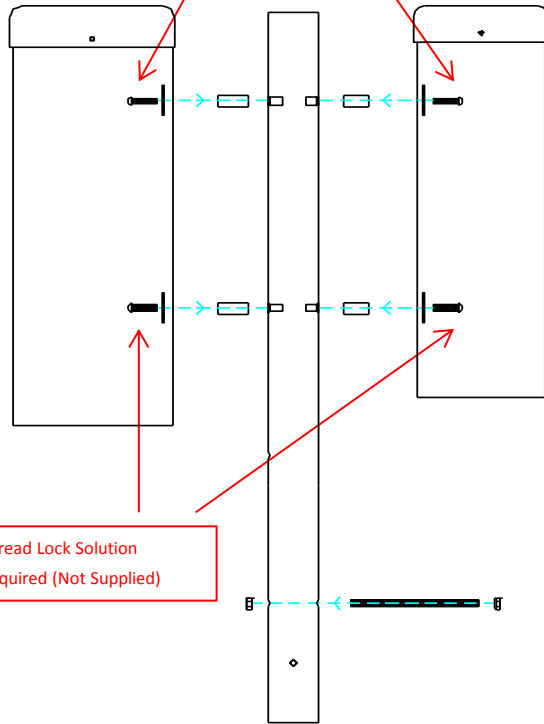




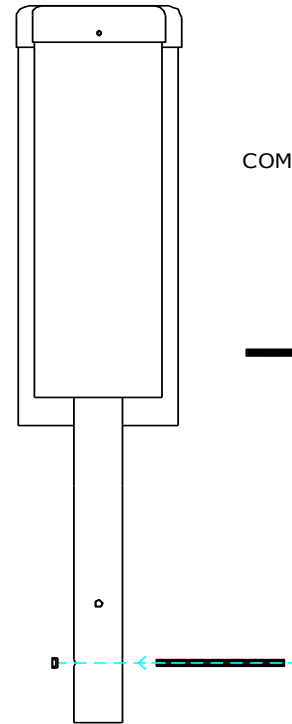


PPCONG FRONT



PPCONG SIDE

**COMPONENTS LIST:**





-  M10x50 Pin torx X4
-  M10x50x3 square washer X4
-  M10 Nut X4
-  M10x200 Threaded Bar X2
-  HDPE MOUNT 200 X2
-  HDPE MOUNT 250 X2

**Ground Fixed**

Congas  
Page 2 of 3





**Instrument Components:**

-  x4  
M10x30 Security Screw
-  x4  
M10x50x3 Square washer
-  x2  
200 Mount
-  x2  
250 Mount

Thread Lock Solution  
Required (Not Supplied)



Ground Fix  
Components:

-  x2  
M10x200 Bolt
-  x4  
M10 Nut


Spares available from  
[percussionplay.com](http://percussionplay.com) or from your  
local distributor

14.8 Kg  
15 Kg  
20 Kg

# Ground Fix Post Installation

## Ground Fixed

Congas  
Page 3 of 3

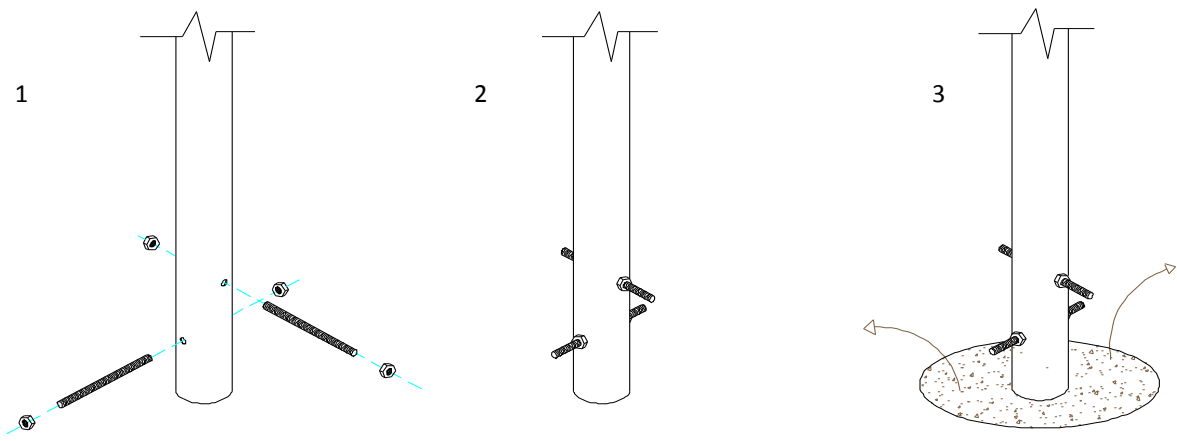


1 Insert M10x 200 Threaded bar into pre drilled holes in Ground Fixing Post

2 Fix M10x 200 Threaded bar in place using M10 Nuts


3 Excavate a hole with a 250mm diameter tapering down to 350mm diameter and 450mm depth

Foundations should not present a hazard. These foundations are recommended as a guide, for more information on foundation details for various surface see Part 7 of BS EN 1176.

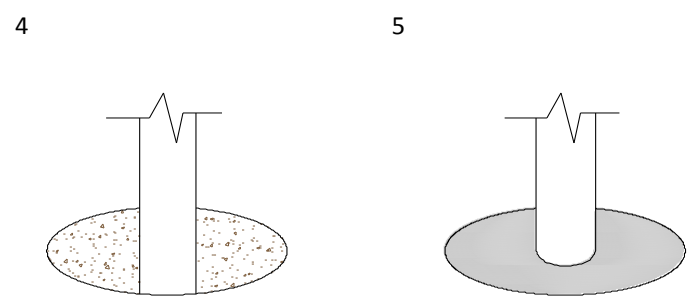

4 Compact base of hole with 50mm of aggregate. Lower ground Fix post attached of instrument into hole (check instrument straight and level before filling with concrete)

5 Fill hole with fast drying concrete to manufacturers specifications.

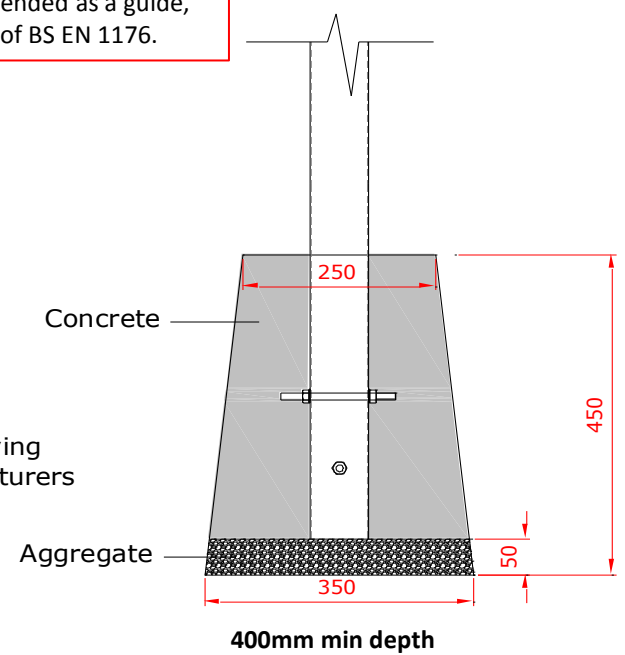

### Components:

-  x2
- M10x200 Bolt
-  x4
- M10 Nut

Metric Conversion:  
50mm/ 2"  
250mm/ 10"  
350mm/ 14"  
400mm/ 16"  
450mm/ 18"