


Installation Instructions

Ground Fixed

Grand Marimba
Page 1 of 3

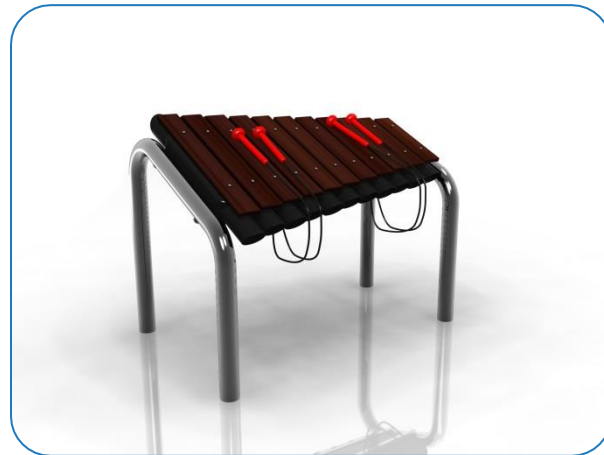

Weight of heaviest part **40kg** (Grand Marimba)



1. Attach the steel legs to each end of the instrument with the M10x30 security screws. (1.1) (See Assembly Guide)

2. Attach Ground Fixing posts to each of the legs (See Ground Fix Post Installation Sheet)

3. Excavate 4 holes for the Steel legs 250mm diameter by 400-550mm deep depending on Key stage, in desired location upon decision from customer.

4. Locate (lower) legs into holes making sure they are vertical and level prior to concreting in place.

5. Once happy with location of the Instrument, fill holes using rapid hardening concrete. Be sure to compact concrete around legs and leave to dry according to manufactures guidelines.

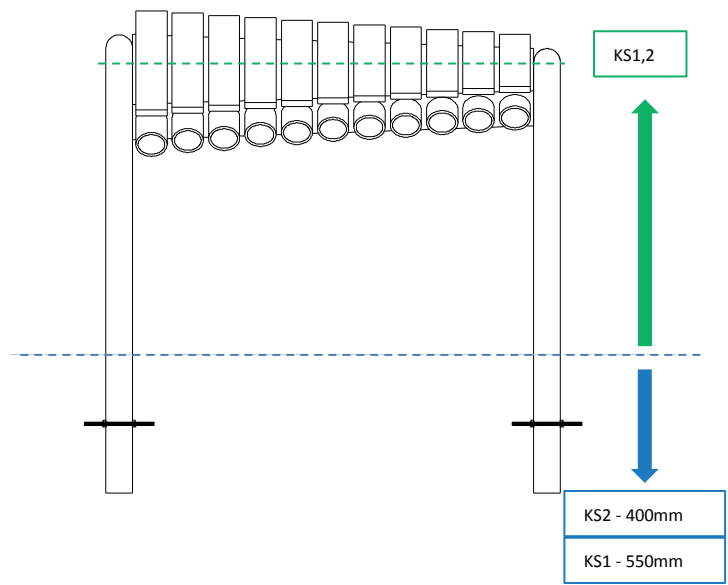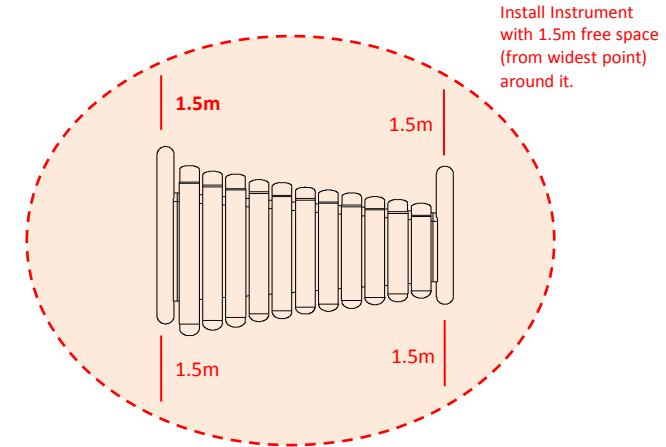

Instrument Components:



Metric Conversion:
250mm/ 10"
400mm/ 16"
550mm/ 22"
1.5m/ 59"





Ground Fix Components:



Spares available form
percussionplay.com or from your
local distributor

48 Kg

Tools:

 x1
 x1

TX 25 Driver Bit TX 45 Driver Bit


Ground Fixed
Grand Marimba
Page 2 of 3








Instrument Components:

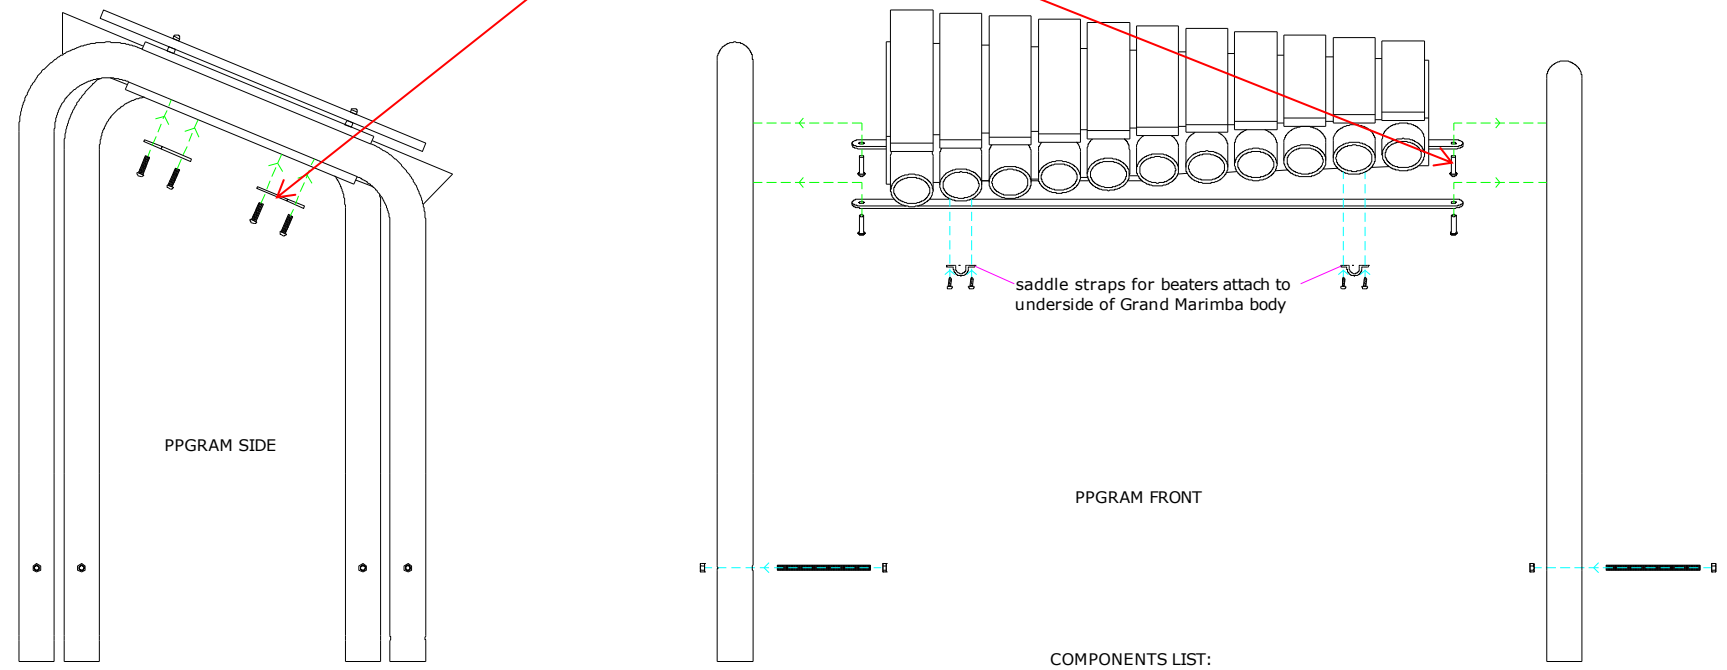
-  x4
M10x30 Security Screw
-  X4
10x3/4 Secure Screw X4

Thread Lock Solution
Required (Not Supplied)



- COMPONENTS LIST:**
-  M10 Nut X8
 -  M10x200 Threaded Bar X4
 -  Saddle Strap X2
 -  10x3/4 Pin torx Screw X4
 -  M10x30 Pin torx X4

Thread Lock Solution
Required (Not Supplied)

Pair Large Red Beaters X2

Ground Fix Components:

-  x4
-  x8


Spares available from
percussionplay.com or from your
local distributor

48 Kg

Ground Fix Post Installation

Tools:
TX 45 Driver Bit x1

Ground Fixed
Grand Marimba
Page 3 of 3

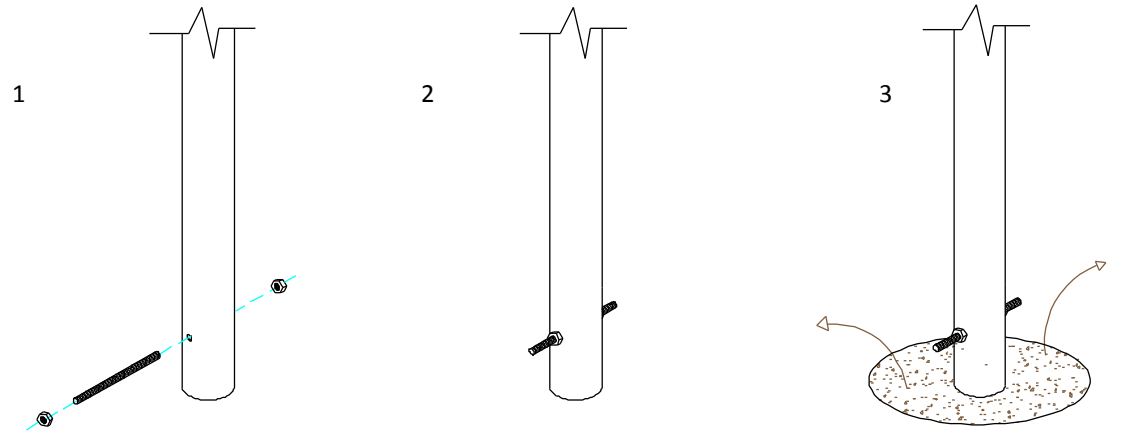

1 Insert M10x 200 Threaded bar into pre drilled holes in Ground Fixing Post

2 Fix M10x 200 Threaded bar in place using M10 Nuts


3 Excavate a hole with a 250mm diameter tapering down to 350mm diameter and 450mm depth

Foundations should not present a hazard. These foundations are recommended as a guide, for more information on foundation details for various surface see Part 7 of BS EN 1176.

- Components:**
- M10x200 Bolt x4
 - M10 Nut x8

Metric Conversion:
50mm/ 2"
250mm/ 10"
350mm/ 14"
400mm/ 16"
450mm/ 18"


Thread Lock Solution Required (Not Supplied)

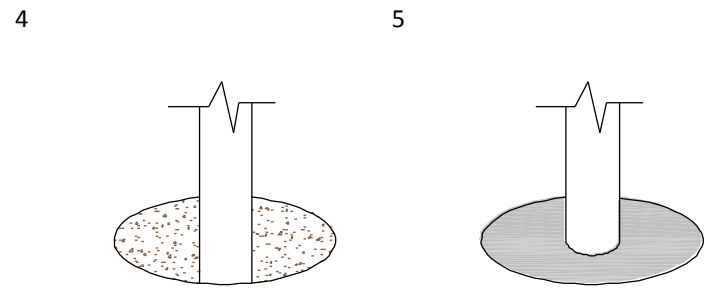

4 Compact base of hole with 50mm of aggregate. Lower ground Fix post attached of instrument into hole (check instrument straight and level before filling with concrete)

5 Fill hole with fast drying concrete to manufacturers specifications.

Duplicate points 1-5. Grand Marimba requires 4 Ground Fix Posts

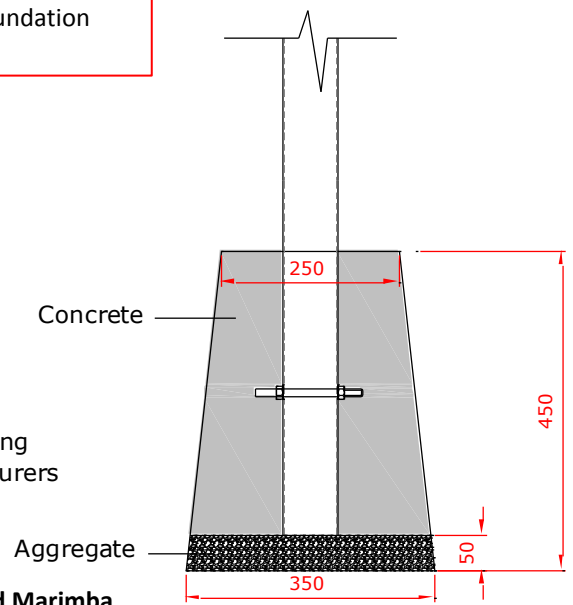

400mm min depth