


# Installation Instructions

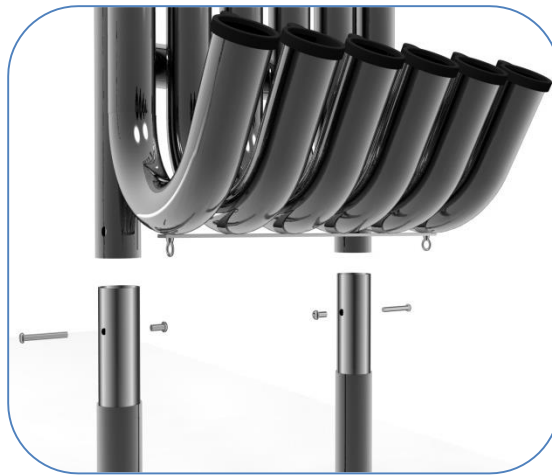


**1. Locate** Tembos frame onto legs and, and bolt into place using pre drilled holes, **2 bolts per post.**(See **Assembly Guide**)

**2. Excavate 1 hole** for Tembos **W300xL700 by 600mm deep** in desired location upon decision from customer. (See **Ground Fix Post Installation sheet**)


**3. Insert the Ground Fix Bar** between the 2 bases of the legs and fix in place with the nuts provided (See **Ground Fix Post Installation sheet**)

**4. Locate frame** into hole according to customers preference. Once happy **fill** holes using rapid hardening **concrete**. Be sure to compact concrete around legs and leave to dry according to manufactures guidelines.

Weight of heaviest part **52kg** (Tembo Frame)

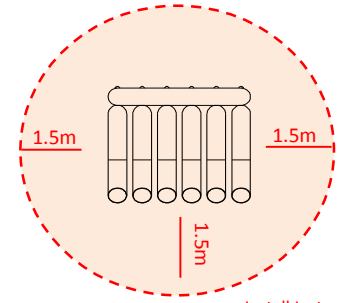

Install Instrument with 1.5m free space (from widest point) around it.

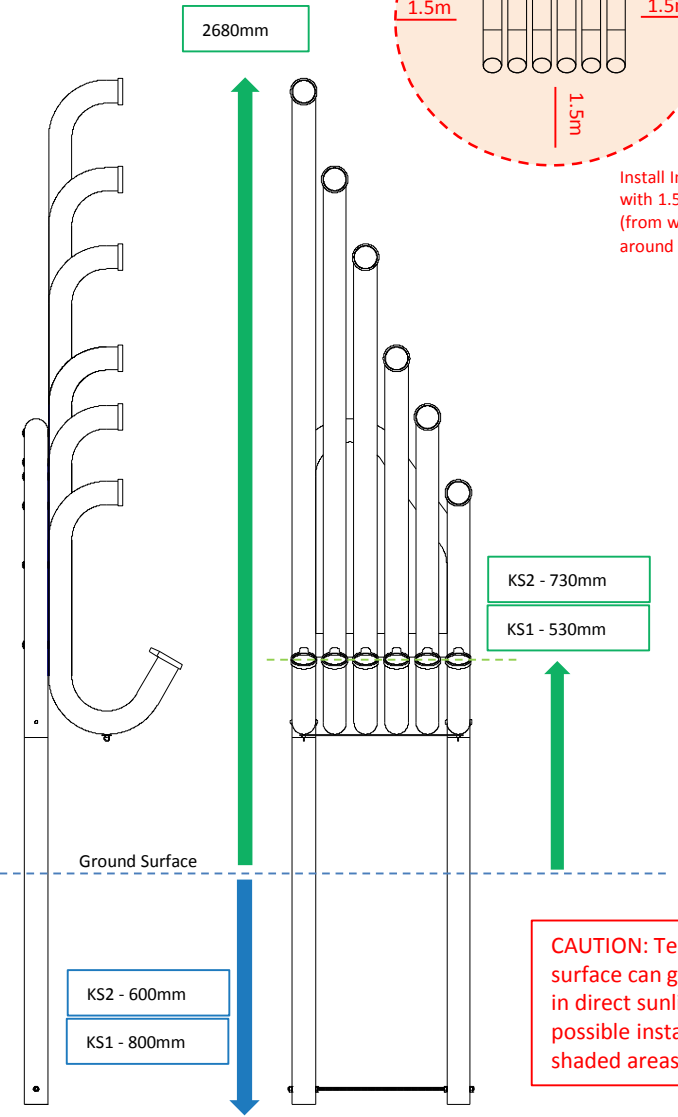

**CAUTION: Tembos surface can get hot in direct sunlight, if possible install in shaded areas.**

## Ground Fixed

Tembos  
Page 1 of 3



### Instrument Components:





-  x12
-  x24
-  x2

Metric Conversion:  
300mm/ 12"  
600mm/ 24"  
700mm/ 28"  
800mm/ 31"  
1.5m/ 59"  
2690mm/ 106"




Pair Neoprene Paddles X1



### Ground Fix Components:

-  x2
-  x2
-  x4
-  x1

Spares available from [percussionplay.com](http://percussionplay.com) or from your local distributor

**80 Kg**

**Tools:**

 x1  
 x2  

Pin Hex Driver Bit TX 45 Driver Bit

Ground Fixed  
Tembos  
Page 2 of 3



Instrument Components:

-  x12  
M10x100 Security Screw
-  x24  
M10 Flanged Slide Bearing
-  x2  
M6 Eye Bolt









Thread Lock Solution  
Required (Not Supplied)



**CAUTION:** Tembos surface can get hot in direct sunlight, if possible install in shaded areas.

Main Frame will arrive pre assembled

Thread Lock Solution  
Required (Not Supplied)



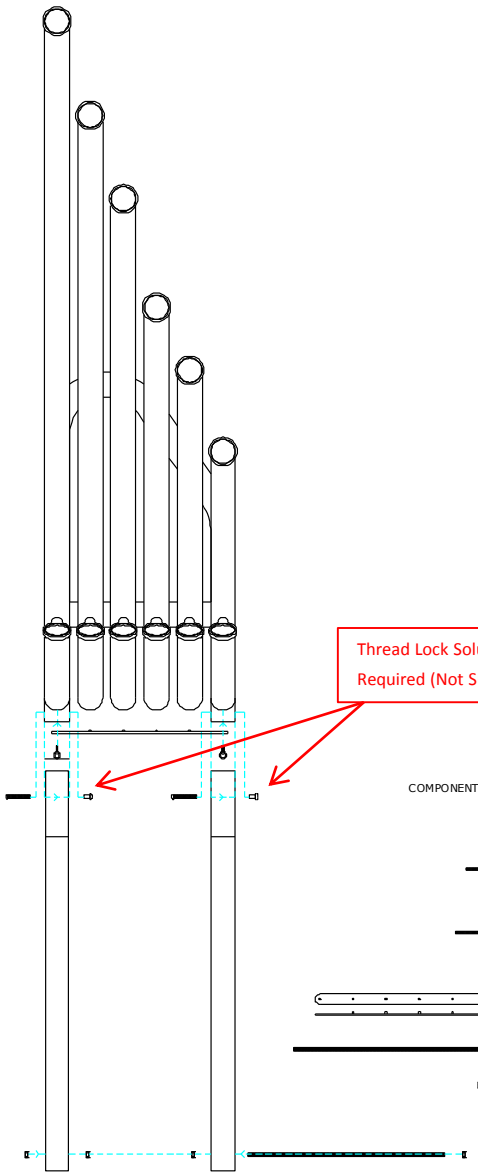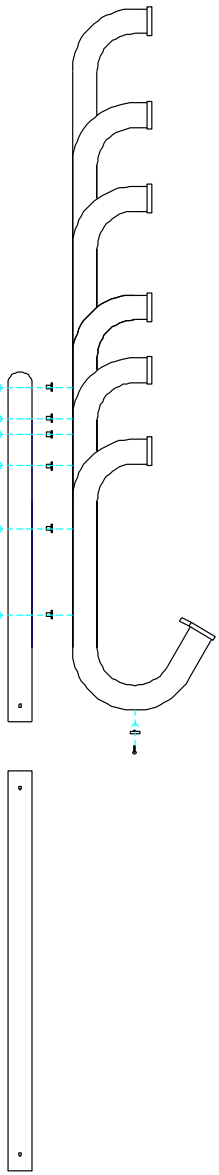

Thread Lock Solution  
Required (Not Supplied)

- COMPONENTS LIST:
-  M6 Eye Bolt X2
  -  M10x70 Pin torx X2
  -  M10 Barrel Nut Pin torx X2
  -  M10x100 Pin torx X12
  -  M10 Black Slide Plastic Bearing X12
  -  SS Brace Bar X1
  -  M10x600 BZP Threaded Bar
  -  M10 Nut X4




Pair Neoprene Paddles X1

Ground Fix Components:

-  x2
-  x2
-  x4
-  x1

Spares available from  
[percussionplay.com](http://percussionplay.com) or from your local distributor

70 Kg

# Ground Fix Post Installation


Foundations should not present a hazard. These foundations are recommended as a guide, for more information on foundation details for various surface see Part 7 of BS EN 1176.

**Tools:**

 x1  
TX 45 Driver Bit

## Ground Fixed

Tembos  
Page 3 of 3

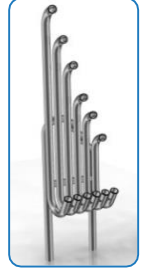

### Components:

-  x2
- M10 Barrel Nut
-  x2
- M10x70 Security Screw
-  x4
- M10 BZP Nut
-  x1
- M10 x 600 Bar

**Metric Conversion:**  
300mm/ 12"  
600mm/ 24"  
700mm/ 28"

