

Wall Fixed Rainbow Trio Metallophone Page 1 of 2



Instrument Components:

×

M8x20 Security Screw



M6x20 Security Screw



2 Part Cover

.ap

M6 Saddle Strap

Metric Conversion: 700mm/28" 850mm/33" 1m/39"



Installation Instructions







Weight of heaviest part 7kg (Metallophone)

1. Attach the steel mount to the rear of the instrument with the M8 x20 screws and 2 part security caps. (1.1) (See Assembly Guide)

2.Position instrument in desired location, according to correct Key stage height, this may require 2 persons.


3.Mark hole locations (X4) using the pre drilled holes in square plate. **Use Template Supplied.**


4. Drill hole locations (X4) according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall. (Not Supplied)

5. Fix through Plate with suitable fixings (not supplied) in correct orientation and height for intended Key stage. Cover Fixings with 2 Part Caps supplied

6. Attach the 1 pair of beater to the saddle strap on the leg. **(1.3)**

Install Instrument with 1m free space (from widest point) around it.

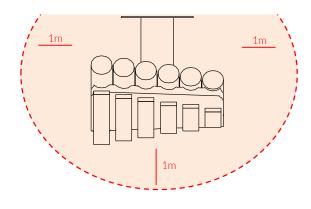

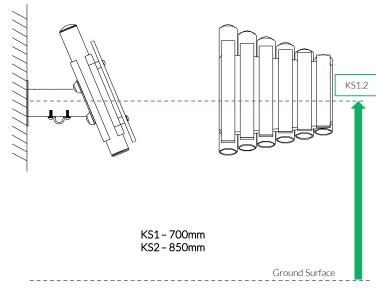




Wall Fix Components:



Wall Anchors not supplied



Assembly Guide PPCADE



Wall Fixed Rainbow Trio Metallophone Page 2 of 2



Instrument Components:

x4 M8x20 Security Screw

x2

M6x20 Security Screw



Сар

M6 Saddle Strap

Thread Lock Solution Required (Not Supplied)

COMPONENTS LIST:



2 Part Cover Cap X8

M8 Nyloc nut X4



 \Box

Saddle Strap X1

■ M6x20 Pin torx X2

M8x20 Pin torx X4

Thread Lock Solution
Required (Not Supplied)





